




To provide phenolic lockers with the proper care and maintenance, the following instructions must be followed: All surfaces should be cleaned with a mild liquid soap only. The finish should then be wiped and dried. In areas containing showers, either self-contained or tiled-in units, the lockers in these rooms must receive ventilation from the outside so that humidity can escape.

Under no circumstance should the following agents be used:

- Abrasive powder or scouring pads
- Water closet cleaners
- Ceramic tile cleaners
- Solutions containing more than 1% by volume of ammonia
- Solutions containing acids or lye
- Solutions containing enzymes

If the above instructions are adhered to our products provide years of dependable service. ASI Storage Solutions shall not accept responsibility for product failure if the above instructions are not followed.

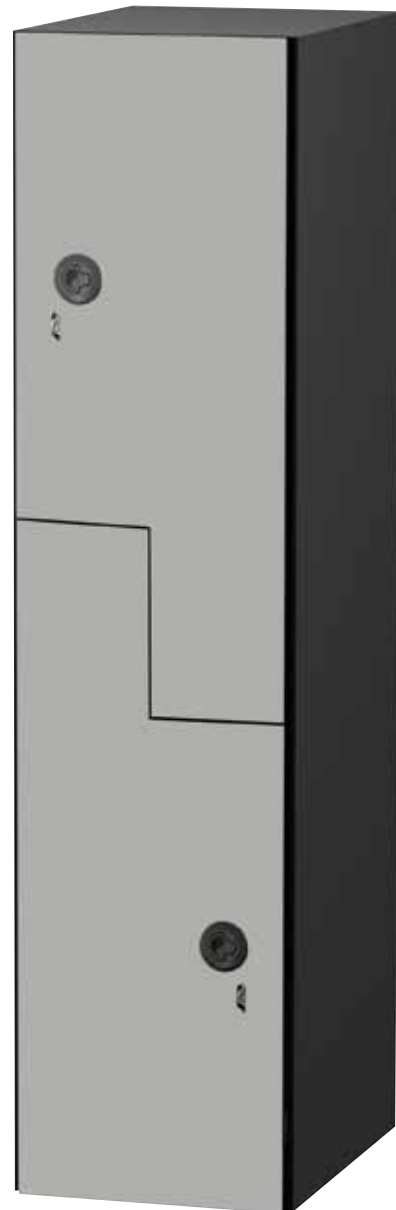

ASI Storage Solutions

2171 Liberty Hill Road, Eastanollee, GA 30538
Tel: 706.827.2701 Fax: 706.827.2710
E-Mail: info@asilockers.com Web: asilockers.com